

GASTROBACK®

Bedienungsanleitung


DESIGN HAND MIXER



Art.-Nr. 40980

Der Gastroback Handmixer dient zum Rühren, Kneten und Schlagen von weichen und flüssigen Nahrungsmitteln und zum Kneten von nicht zu festem Teig. Das Gerät ist einfach und unkompliziert in der Handhabung und leicht zu reinigen. Sie brauchen Ihre Nahrungsmittel nicht in spezielle Rührgefäße umfüllen, sondern können alle ausreichend großen und stabilen Gefäße verwenden, die Sie in Ihrem Haushalt zur Verfügung haben. Das Gerät wurde in Übereinstimmung mit der Niederspannungsrichtlinie und den EU-Richtlinien zur Elektromagnetischen Verträglichkeit (EMV) konstruiert und erfüllt alle aktuellen technischen Sicherheitsnormen.

Den Handmixer kennenlernen

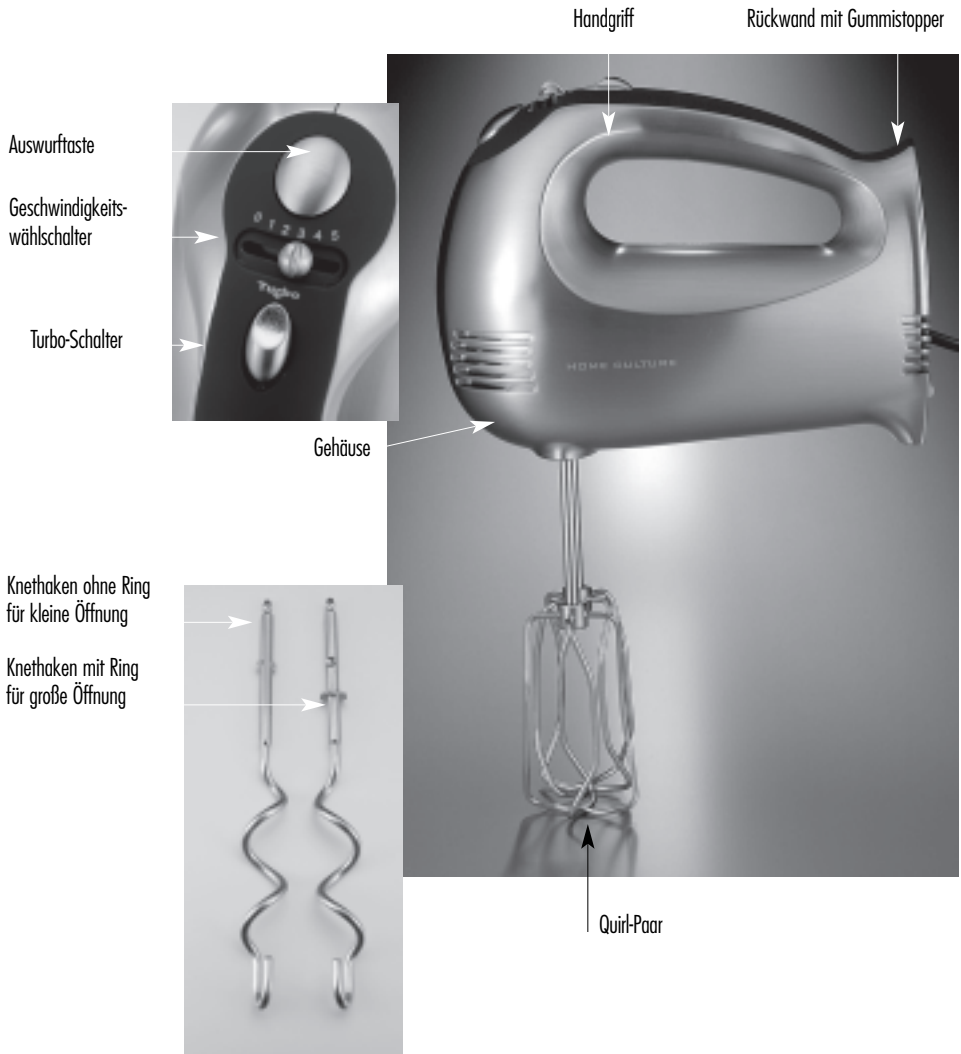

Wichtige Sicherheitshinweise

Lesen Sie bitte alle Hinweise und Anleitungen, die mit dem Gerät geliefert werden, sorgfältig und vollständig durch und bewahren Sie die Anleitung und die Verpackung zur weiteren Verwendung gut auf. Verwenden Sie das Gerät ausschließlich in der hier angegebenen Weise zu dem beschriebenen Zweck (bestimmungsgemäßer Gebrauch). Ein bestimmungswidriger Gebrauch und besonders Missbrauch können zu Sachschäden sowie zu schweren Personenschäden durch gefährliche elektrische Spannung, Feuer und bewegliche Bauteile führen. **Führen Sie ausschließlich diejenigen Arbeiten am Gerät durch, die in diesen Anleitungen beschrieben werden.**

Reparaturen und technische Wartung am Gerät oder Netzkabel dürfen nur von dafür autorisierten Fachwerkstätten durchgeführt werden. Wenden Sie sich dazu bitte an Ihren Händler. Wenn Sie Fragen zum Gerät haben, dann wenden Sie sich bitte an:
Gastroback GmbH, Gewerbestr. 29, D-21729 Hollenstedt, Telefon: (04165) 81777

Allgemeine Hinweise zur Sicherheit

- Nur zum Gebrauch für haushaltsübliche Mengen und in Innenräumen. Verwenden und lagern Sie das Gerät **nicht im Freien**. Lassen Sie das Gerät nicht länger als 6 Minuten durchgehend arbeiten.
- Verwenden Sie nur Bauteile, Ersatzteile und Zubehöre (Knethaken, Quirle) für das Gerät, die vom Hersteller für diesen Zweck vorgesehen und empfohlen sind, um eine Gefährdung durch Überhitzung, Feuer, Elektrizität oder bewegliche Bauteile zu vermeiden. Versuchen Sie niemals, das Gerät und/oder Teile des Geräts zu öffnen. Verwenden Sie das Gerät nicht mehr, wenn das Gerät oder Bauteile des Geräts beschädigt sind.
- **Niemals** das Gerät an den Knethaken oder Quirlen oder am Netzkabel anheben, bewegen oder tragen. Fassen Sie das Gerät immer am Handgriff an, wenn Sie das Gerät bewegen oder verwenden wollen.
- Kinder und gebrechliche Personen müssen Sie bei der Handhabung von Elektrogeräten stets besonders beaufsichtigen. Lassen Sie kleine Kinder nicht mit dem Gerät oder den Bauteilen spielen. Bewahren Sie das Gerät immer an einem trockenen, sauberen, für Kinder unzugänglichen Ort auf.
- Die Arbeits- und Ablagefläche muss gut zugänglich, fest, eben, trocken und ausreichend groß sein. Verwenden Sie das Gerät **nicht** in feuchten oder nassen Bereichen. Wenn Sie heiße Nahrungsmittel verarbeiten, dann achten Sie darauf, das Gerät nicht in den Dampf zu halten. **Niemals** das Gerät an den Rand oder an die Kante der Arbeitsfläche legen. Wenn Sie das Gerät ablegen, dann legen Sie das Gerät immer auf eine glatte, feste Unterlage auf die Seite oder stellen Sie es auf die Rückwand. Achten Sie darauf, dass das Gerät nicht herunterfällt oder umgestoßen wird.

• **Niemals** das Gerät oder Teile des Geräts in die Nähe von starken Wärmequellen und heißen Oberflächen (Beispiel: Heizung, Ofen, Grill) stellen oder legen oder für längere Zeit intensivem Sonnenlicht aussetzen.

• **Niemals** Gerät, Kabel oder Netzstecker in Wasser oder andere Flüssigkeiten tauchen oder legen oder Flüssigkeiten darüber gießen. Trocknen Sie übergelaufene Flüssigkeiten sofort ab. Niemals das Gerät betreiben, wenn sich Flüssigkeiten auf dem Gerät befinden oder in das Innere des Geräts eingedrungen sind, um eine Gefährdung durch Elektrizität, Brandgefahr und eine Beschädigung des Geräts zu vermeiden. Fassen Sie das Gerät in diesem Fall nicht an sondern ziehen Sie sofort den Netzstecker aus der Steckdose. Reinigen Sie ausschließlich die Knethaken und Quirle in der Spülmaschine.

• **Niemals das Gerät in der Spülmaschine reinigen!**

• Verwenden Sie das Gerät ausschließlich für Nahrungsmittel. **Niemals lösemittelhaltige Flüssigkeiten (Beispiel: Lacke und Farben) mit dem Gerät bearbeiten!** Die Lösemitteldämpfe könnten sich am Motor des Geräts entzünden und explodieren!

• **Niemals** das Gerät und die Bauteile des Geräts mit scharfen Reinigern (Desinfektionsmittel, Bleiche) Scheuermitteln, harten Scheuerhilfen (Beispiel: Topfreiniger) oder harten, scharfkantigen Gegenständen reinigen. Halten Sie das Gerät fern von scharfen Kanten und Schneiden. Lassen Sie keine Nahrungsmittelreste auf den Bauteilen des Geräts eintrocknen.

• Überprüfen Sie das Gerät und das Netzkabel regelmäßig auf Schäden und einwandfreie Funktion. Verwenden Sie das Gerät nicht mehr, wenn Flüssigkeiten in das Gerät eingedrungen sind. Achten Sie darauf, dass die Luftschlitze vorn und hinten am Gerät während der Arbeit frei bleiben.

• **Niemals** das Gerät verwenden, wenn das Gerät oder Teile davon beschädigt sind, übermäßigen Belastungen ausgesetzt waren (Beispiel: Sturz, Überhitzung oder eingedrungene Flüssigkeit) oder nicht mehr erwartungsgemäß arbeiten. Ziehen Sie dann sofort den Netzstecker aus der Steckdose und lassen Sie das Gerät in einer autorisierten Fachwerkstatt überprüfen. Besonders die Rührwerkzeuge (Knethaken, Quirle) können durch übermäßige Belastungen (Beispiel: Unachtsamkeit bei der Handhabung) verbogen werden. **Niemals** das Gerät mit verbogenen oder gebrochenen Rührwerkzeugen verwenden, um eine Gefährdung durch bewegliche Bauteile und eine Überhitzung des Geräts zu vermeiden.

• **Ziehen Sie immer zuerst den Netzstecker, bevor Sie die Rührwerkzeuge abnehmen oder einstecken. Verwenden Sie die Rührwerkzeuge immer nur in zusammen passenden Paaren. Niemals verschiedene Rührwerkzeuge miteinander kombinieren.** Vergewissern Sie sich stets vor der Verwendung des Geräts, dass die Rührwerkzeuge richtig eingerastet sind. Versuchen Sie niemals, die Rührwerkzeuge mit Gewalt einzusetzen oder abzunehmen. Zum Abnehmen der Rührwerkzeuge dient die Auswurfaste.

- Schließen Sie das Gerät erst an die Stromversorgung an, wenn es vollständig und richtig nach der Anleitung im Kapitel Verwendung zusammengesetzt ist.

Wichtige Sicherheitshinweise – Elektrizität

- Betreiben Sie das Gerät in der Nähe einer passenden Wandsteckdose und schließen Sie das Gerät dort direkt an. **Niemals** das Gerät an eine Tischsteckdose anschließen! Das Gerät darf nur an die ordnungsgemäß abgesicherte Schuko-Steckdose einer geeigneten Stromversorgung (Wechselstrom; 220/230 V, 50 Hz) mit Schutzleiter angeschlossen werden.

Die Steckdose sollte über einen Fehlerstromschutzschalter abgesichert sein, dessen Auslösestrom nicht über 30 mA liegen sollte. Wenden Sie sich im Zweifelsfall an Ihren Elektriker.

- **Niemals** das Gerät unbeaufsichtigt lassen, wenn der Netzstecker eingesteckt ist. Schalten Sie das Gerät AUS und ziehen Sie den Netzstecker aus der Steckdose, wenn Sie das Gerät nicht benutzen, die Rührwerkzeuge abnehmen oder einsetzen oder das Gerät reinigen wollen. Fassen Sie am Gehäuse des Steckers an, wenn Sie den Stecker ziehen.

- **Niemals** am Kabel ziehen oder reißen oder das Kabel knicken, einklemmen, quetschen oder verknoten. Achten Sie darauf, dass niemand in Kabelschlaufen hängen bleiben kann oder das Gerät am Kabel von der Arbeitsfläche reißen kann. Achten Sie darauf, dass das Netzkabel nicht über die Tischkante oder Tresenkante herunterhängt.

- **Niemals** das Gerät mit feuchten oder nassen Händen anfassen, um eine Gefährdung durch elektrischen Schlag zu vermeiden. Niemals das Gerät anfassen, wenn das Gerät feucht geworden ist und an die Stromversorgung angeschlossen ist. Ziehen Sie in einem solchen Fall immer sofort den Netzstecker aus der Steckdose, um eine Gefährdung durch Elektrizität und Schäden am Gerät zu vermeiden.

Mögliche Gefährdungen durch bewegliche Bauteile

- **Niemals** die installierten Rührwerkzeuge an Haare, Hände, Kleidungsstücke, Tücher oder andere Fremdkörper halten, wenn der Netzstecker in der Steckdose steckt.

Schalten Sie das Gerät immer zuerst AUS, warten Sie, bis der Motor vollständig zum Stillstand gekommen ist und ziehen Sie den Netzstecker, bevor Sie die Rührwerkzeuge abnehmen oder einsetzen.

- Halten Sie die Rührwerkzeuge immer zuerst in die Nahrungsmittel, bevor Sie das Gerät einschalten, um Spritzer zu vermeiden. Tauchen Sie die Rührwerkzeuge höchstens bis etwa 5 cm (3 Finger breit) unter den Boden des Geräts ein.

Einige Bemerkungen zu Rührwerkzeugen und Auswurfaste

Das Gerät wird mit zwei zusammengehörigen Paaren von Rührwerkzeugen geliefert:

- *Quirle*: für dünn-flüssige Nahrungsmittel (Getränke, Soßen, Pfannkuchenteig, schaumig geschlagene Desserts, Schlagsahne und anderes) und
- *Knethaken* für Teig, Kartoffelpüree, Butter.

Wenn die Rührwerkzeuge richtig eingesetzt werden, dann rasten die Rührwerkzeuge hörbar am Gerät ein und können nicht herausfallen.

Wenn Sie die Rührwerkzeuge abnehmen wollen, dann drücken Sie einfach die Auswurfaste. Zu Ihrer Sicherheit ist die Auswurfaste gesperrt, wenn der Motor eingeschaltet ist.

WARNUNG: Schalten Sie das Gerät immer zuerst AUS (Schalterposition 0) und warten Sie, bis der Motor vollständig steht, bevor Sie die Auswurfaste betätigen.

Jedes Rührwerkzeug ist nur für eine der beiden Öffnungen im Boden des Geräts vorgesehen.

ACHTUNG: Die Rührwerkzeuge mit Ring am Schaft können nur in die große Öffnung eingesteckt werden. Die Rührwerkzeuge ohne Ring sind ausschließlich für die kleine Öffnung vorgesehen. Versuchen Sie niemals, ein Rührwerkzeug in der falschen Öffnung einzustekken. Verwenden Sie immer nur zusammengehörige Paare. **Niemals** Knethaken mit Quirlen kombinieren.

Rührgeschwindigkeit

Das Handrührgerät ist mit einem Wählschalter für 5 Geschwindigkeitsstufen ausgestattet:

| Geschwindigkeit | Rührwerkzeug | Verwendungsbeispiele |
|-----------------|--------------|------------------------|
| 0 (AUS) | – | – |
| 1 | Knethaken | Butter, Kartoffelpüree |
| 2 | Quirle | Soßen, Getränke |
| 3 | Knethaken | dünnflüssiger Teig |
| 4 | Quirle | Schaumige Desserts |
| 5 | Quirle | Schlagsahne, Eiweiß |

Wenn Sie mit den höheren Geschwindigkeitsstufen arbeiten wollen, dann schalten Sie nur schrittweise hoch, damit die Nahrungsmittel nicht zu stark spritzen.

Außerdem verfügt das Gerät über einen Turbo-Schalter, mit der Sie die Rührgeschwindigkeit kurzzeitig erhöhen können.

ACHTUNG: Halten Sie den Turbo-Schalter nicht länger als 3 Minuten gedrückt, um eine Überhitzung zu vermeiden.

Verwendung

Vor der ersten Verwendung

Entfernen Sie vor der ersten Verwendung alle Werbeaufkleber und Verpackungsmaterialien vom Gerät. Entfernen Sie aber NICHT das Typenschild an der Rückwand.

Reinigen Sie die Rührwerkzeuge vor der ersten Verwendung und nach längerer unbenutzter Lagerung mit etwas handwarmer Spülmittellösung nach der Anleitung im Kapitel Pflege und Reinigung.

Mit dem Handmixer arbeiten

WARNUNG: Schalten Sie das Gerät immer zuerst AUS, warten Sie, bis der Motor vollständig zum Stillstand gekommen ist und ziehen Sie den Netzstecker, bevor Sie die Rührwerkzeuge einstecken oder abnehmen. Jedes der Rührwerkzeuge darf nur in eine der beiden Öffnungen am Boden des Geräts gesteckt werden. Verwenden Sie nur zusammen passende Paare der Rührwerkzeuge. Stecken Sie die Rührwerkzeuge mit Ring am Schaft nur in die weite Öffnung. **Die Rührwerkzeuge ohne Ring dürfen nur in die schmale Öffnung gesteckt werden.** Verwenden Sie niemals einen Knethaken und einen Quirl zusammen, um das Gerät nicht zu beschädigen.

1. Vergewissern Sie sich, dass das Gerät AUSgeschaltet (Position 0) und von der Stromversorgung getrennt ist.

2. Füllen Sie die gewünschten Nahrungsmittel in ein ausreichend großes hohes und stabiles Gefäß.

ACHTUNG: Niemals zerbrechliche Gefäße (Beispiel: dünnes Glas oder feines Porzellan) für die Arbeit mit dem Gerät verwenden. Ideal sind hohe Gefäße mittlerer Größe aus bruchsicherem Kunststoff oder Edelstahl. Achten Sie während der Arbeit darauf, dass die Rührwerkzeuge nicht an den Gefäßrand schlagen.

3. Wählen Sie das gewünschte zusammengehörige Rührwerkzeug-Paar aus: Knethaken oder Quirle (siehe: Einige Bemerkungen zu Rührwerkzeugen und Auswurfaste).

4. Stecken Sie die Schäfte der Rührwerkzeuge in die Öffnungen am Boden des Geräts. Jedes der Rührwerkzeuge ist für eine bestimmte Öffnung vorgesehen und darf nur in diese Öffnung gesteckt werden: Die Rührwerkzeuge mit Ring am Schaft können nur in die weite Öffnung gesteckt werden. Drehen Sie das Rührwerkzeug dabei etwas, bis das Rührwerkzeug hörbar im Gerät einrastet.

5. Stecken Sie den Stecker in die Steckdose.

WARNUNG: Halten Sie die Rührwerkzeuge nicht zu tief in die Nahrungsmittel (mindestens 3 Finger breit Abstand zwischen Nahrungsmittel und Boden des Geräts). Andernfalls könnte das Gerät durch aufgewirbelte Flüssigkeit feucht werden oder sogar Flüssigkeiten in das Gerät laufen oder Teig könnte in die Öffnungen für die Rührwerkzeuge gelangen. **Niemals** bei eingestecktem Netzstecker auf die Rührwerkzeuge greifen oder die Rührwerkzeuge an irgendwelche Fremdkörper (Beispiel: Tücher) halten.

6. Halten Sie die Rührwerkzeuge in das Nahrungsmittel.

Achten Sie darauf, dass die Rührwerkzeuge die Gefäßwand nicht berühren. Schalten Sie das Gerät nicht ein, so lange Sie die Rührwerkzeuge in der Luft halten.

WARNUNG: Wenn Sie heiße Nahrungsmittel verarbeiten, dann achten Sie darauf, das Gerät nicht in den Dampf zu halten, um Kondensation auf dem Gerät zu vermeiden. Wischen Sie Kondenswasser am Gehäuse sofort ab. Rechnen Sie damit, dass die Nahrungsmittel bei der Arbeit mit dem Gerät spritzen.

7. Halten Sie das Rührgefäß mit einer Hand fest und schalten Sie das Gerät ein. Die Rührwerkzeuge beginnen zu rotieren. Bewegen Sie das Gerät während der Arbeit langsam hoch und runter.

ACHTUNG: Die Luftschlitze vorn und hinten am Gerät müssen während der Arbeit frei bleiben. Lassen Sie das Gerät nicht länger als 6 Minuten ohne Unterbrechung laufen, um eine Überhitzung zu vermeiden. Warten Sie nach 6-minütiger Laufzeit etwa 10 Minuten, damit das Gerät abkühlen kann, bevor Sie das Gerät wieder einschalten.

Sie sollten die langsamen Geschwindigkeiten zunächst bevorzugen. Schalten Sie falls erforderlich nur langsam in die höheren Geschwindigkeiten, damit die Nahrungsmittel nicht spritzen.

8. Sobald Ihre Nahrungsmittel die gewünschte Beschaffenheit haben, spätestens aber nach 6 Minuten, schalten Sie das Gerät AUS (Schalterposition 0).

9. Warten Sie bis der Motor steht und nehmen Sie die Rührwerkzeuge dann aus den Nahrungsmitteln heraus und legen Sie das Gerät auf einer geeigneten Unterlage ab, von der es nicht herunterfallen kann.

Sie können das Gerät aufrecht auf die Rückwand stellen. Achten Sie jedoch darauf, dass das Gerät in diesem Fall nicht umgestoßen werden kann.

WARNUNG: Schalten Sie das Gerät immer zuerst AUS, warten Sie bis der Motor steht und ziehen Sie den Netzstecker, bevor Sie die Rührwerkzeuge einsetzen oder entfernen.

10. Reinigen Sie das Gerät möglichst sofort nach der Arbeit. Lassen Sie keine Nahrungsmittel auf dem Gerät oder den Rührwerkzeugen eintrocknen.

Pflege und Reinigung

WARNUNG: Um Verletzungen und Schäden am Gerät zu vermeiden: Schalten Sie das Gerät vor dem Reinigen immer zuerst AUS, warten Sie, bis der Motor zum Stillstand gekommen ist und ziehen Sie den Netzstecker. **Niemals** die Rührwerkzeuge anfassen oder irgendwelche Fremdkörper daran halten, wenn der Netzstecker in der Steckdose steckt.

Niemals das Gerät, das Netzkabel oder den Netzstecker in Wasser oder andere Flüssigkeiten eintauchen oder in der Spülmaschine reinigen.

ACHTUNG: Niemals das Gerät oder Teile des Geräts mit scharfen Reinigern (Desinfektionsmittel, Bleiche) Scheuermitteln, harten Scheuerhilfen (Beispiel: Topfreiniger) oder harten, scharfkantigen Gegenständen reinigen. Das Gehäuse des Geräts ist aus Edelstahl. Scheuermittel, scharfe Reinigungsmittel und harte, scharfkantige Gegenstände beschädigen die Oberfläche.

1. Schalten Sie das Gerät zum Reinigen immer zuerst AUS, warten Sie bis der Motor zum Stillstand gekommen ist und ziehen Sie den Netzstecker aus der Steckdose.
2. Halten Sie die Rührwerkzeuge über das Spülbecken oder eine Schüssel und drücken Sie auf die Auswurfaste, um die Rührwerkzeuge freizugeben.
3. Reinigen Sie die Rührwerkzeuge in warmer Spülmittellösung oder im Besteckfach in der Spülmaschine.
Festgetrocknete Nahrungsmittelreste an den Rührwerkzeugen können Sie vor der Reinigung in handwarmer Spülmittellösung einweichen.

ACHTUNG: Niemals das Gerät oder das Netzkabel in der Spülmaschine reinigen!

Niemals das Gerät, das Netzkabel oder den Netzstecker in Wasser oder andere Flüssigkeiten eintauchen. Niemals Wasser oder andere Flüssigkeiten über das Gerät gießen oder das Gerät auf nasse oder feuchte Oberflächen legen.

4. Wischen Sie das Gerät und das Netzkabel mit einem feuchten, nicht tropfenden Tuch ab.
5. Trocknen Sie das Gerät und die Rührwerkzeuge sorgfältig ab. Lassen Sie die Bauteile eventuell noch einige Minuten an der Luft trocknen.

Aufbewahrung

Bewahren Sie das Gerät an einem trocknen und frostfreien Ort auf, an dem es vor direktem Sonnenlicht geschützt und für kleine Kinder unzugänglich ist. Legen Sie das Gerät zur Aufbewahrung auf eine saubere feste Unterlage, von der es nicht herunterfallen kann; legen Sie keine schweren, harten Gegenstände auf das Gerät oder die Rührwerkzeuge.

Entsorgungshinweise

Das Gerät muss entsprechend den örtlichen Bestimmungen zur Entsorgung von Elektroschrott entsorgt werden. Informieren Sie sich gegebenenfalls bei Ihrem örtlichen Entsorgungsunternehmen.

Gewährleistung/Garantie

Wir gewährleisten für alle Gastroback-Elektrogeräte, dass sie zum Zeitpunkt des Kaufes mangelfrei sind.

Nachweisliche Fabrikations- oder Materialfehler werden unter Ausschluss weitgehender Ansprüche und innerhalb von zwei Jahren nach dem Kaufdatum, kostenlos ersetzt oder behoben. Ein Gewährleistungsanspruch des Käufers besteht nicht, wenn der Schaden an dem Gerät auf unsachgemäße Behandlung, Überlastung oder Installationsfehler zurückgeführt werden kann. Ohne unsere schriftliche Einwilligung erfolgte technische Eingriffe von Dritten führen zum sofortigen Erlöschen des Gewährleistungsanspruchs.

GASTROBACK®

Operating Instructions

DESIGN HAND MIXER




Art.-No. 40980

The hand-held Home Culture Design Hand Mixer is perfectly suited for mixing, beating and blending liquids and kneading runny pastry. The Hand Mixer is straightforward in use and cleaning is quite easy. There is no need to fill the food in a special vessel, just use any suitable vessel you have at your disposal.

The Home Culture Design Hand Mixer is designed to comply with the requirements of the EMC and Low-Voltage directives of the European Union and meets all recent technical safety standards.

Knowing Your Design Hand Mixer

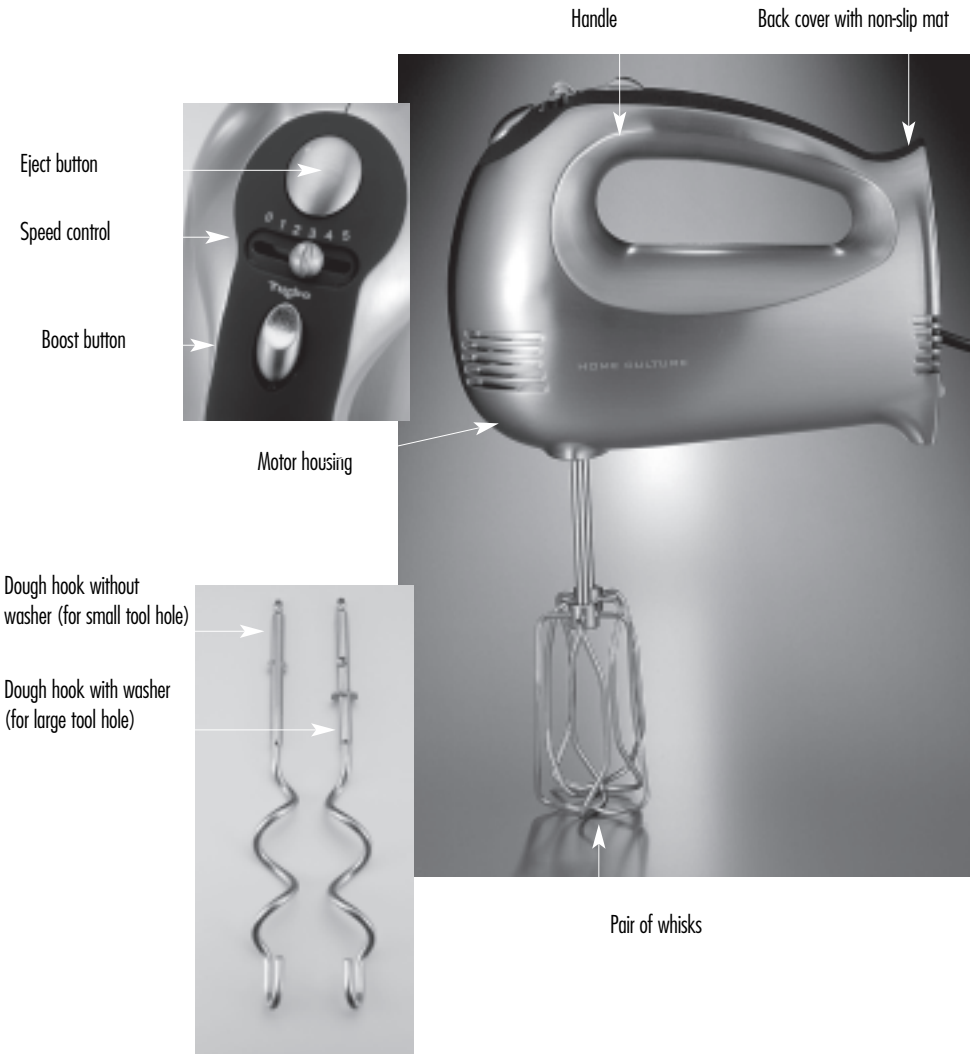

Important Safeguards

Carefully read all instructions before operating and save the instructions for further reference. Do not attempt to use this appliance for any other than the intended use, described in these instructions. Any other use, especially misuse, can cause severe injuries or damage by electric shock, fire or moving mechanical parts.

Any operation, repair and technical maintenance of the appliance or any part of it other than described in these instructions may only be performed at an authorised service centre. Please contact your vendor.

Safeguards for Daily Operation

- The appliance is designed for normal household quantities. Do not operate or store the appliance outdoors or in damp or wet areas. Do not operate the appliance in continuous operation for more than 6 minutes to avoid overheating. If processing large quantities of food, interrupt operation after 6 minutes and unplug the appliance for at least 10 minutes, to let the motor cool down.

- Do not attempt to operate the appliance using any parts or accessories not recommended by the manufacturer (i.e. processing tools). Especially the whisks and dough hooks are sensitive to careless handling. Do not operate the appliance, when the appliance or any part of it is likely to be damaged, to avoid risk of overheating, fire, electric shock or any other damage or injuries to persons. Do not attempt to open the motor housing or to repair the power cord. Check the entire appliance regularly for proper operation. The appliance is likely to be damaged if the appliance was subject to inadmissible strain (i.e. overheating, mechanical or electric shock) or if there are any cracks, excessively frayed parts, distortions or the gear stalls or sticks. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair. During operation do not block the ventilation slits at the front and back of the appliance.

- **Always IMMEDIATELY unplug the appliance after each operation and before assembling or disassembling the whisks or dough hooks and before laying down the appliance. Only use the processing tools in matched pairs and insert each processing tool in its assigned tool hole in the bottom of the motor housing. Do not use whisks and dough hooks together.** Always ensure, that the processing tools are engaged firmly before connecting the appliance to the mains power supply (see Operation). Always handle the entire appliance and the tools with care and without violence. Use the eject button, to remove the tools.

- Do not lift, pull or carry the appliance by the processing tools. To move or operate the appliance, always hold on to the handle.

- Before use, always make sure that the appliance is properly and completely assembled (see Operation).

- Close supervision is necessary when the appliance is used near young children. Do not let young children play with any parts of the appliance or the packing. The appliance is NOT intended for use by children or infirm persons without supervision. Take care that no one will pull the appliance by the power cord, especially when young children are near. Place the appliance on a clean, dry and stable surface where it is protected from inadmissible strain (i.e. mechanical or electric shock, overheating, frost, moisture, direct sunlight) and where young children cannot reach it.

- Operate the appliance on a well accessible, stable, level, dry, and suitable large table or counter. Do not place the appliance or any part of it on or near hot surfaces (heater, gas burner, grill or oven). When processing hot food, do not hold the appliance in rising steam, to avoid condensation on the appliance. Do not place the appliance near the edge of the table or counter or on inclined or wet surfaces or where it can fall. Always unplug the appliance before laying it down. Place the appliance on a stable and level surface on its side or in an upright position on its back cover. If the appliance is in upright position, take care not to knock over the appliance.

- Do not immerse the motor housing or power cord in water or any other liquid. Do not pour or drip any liquids on the motor housing or power cord. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire. Do not attempt to operate the appliance, when liquids are on or in the motor housing. With the appliance connected to the power supply, do not touch the appliance with wet hands or when the appliance is damp or wet or is touching wet surfaces. In this case **do not touch the appliance** but immediately unplug the power cord from the power supply and dry the appliance (see Care and Cleaning). Only the processing tools (dough hooks or whisks) may be cleaned in an automatic dishwasher.

- **Do not place the motor housing or power cord in an automatic dishwasher!**

- To avoid damage, do not use any abrasive cleaners, corrosive chemicals (i.e. disinfectants, bleach) or cleaning pads for cleaning. Do not use any hard or sharp utensils for operation or cleaning. Keep the appliance away from sharp edges. Do not leave any food dry on the surfaces of the appliance.

- The appliance is intended for blending and mixing food only. Do not use the appliance for any other purpose, especially, **do not process any liquids containing inflammable or corrosive solvents** (i.e. paint or lacquer). **Fumes of volatile solvents coming in contact with the motor, could catch fire and explode!**

Important Safeguards for all Electrical Appliances

- Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220/240 V, 50 Hz, AC). Always connect the appliance directly to a mains power supply wall socket with protective conductor (earth/ground) connected properly. The installation of a residual current safety switch with a maximum rated residual operating current of 30 mA in the supplying electrical circuit is recommended. If in doubt, contact your local electrician for further information.

Do not use any multiple desk socket.

- Do not leave the appliance unattended while connected to the power supply. **Always switch OFF the appliance and IMMEDIATELY unplug the appliance after operation and if it is not in use and before laying it down, cleaning and/or assembling or disassembling the processing tools.** Always grasp the plug to disconnect the appliance from the power outlet.

- Always handle the power cord with care. Do not pull or strain the power cord. The power cord may never be knotted or squeezed. Do not let the power cord hang over the edge of the table or counter. Take care not to entangle in the power cord.

- Do not touch the appliance with wet hands to avoid risk of electric shock. Do not touch the appliance, when it is damp or wet and connected to the mains power supply. In this case, immediately unplug the appliance to avoid risk of electric shock and damage.

Moving Parts – Risks of Injuries to Persons

- Do not touch the processing tools (whisks and dough hooks) with your hands or any other objects (hair, clothes, brushes, cooking utensils), when the appliance is connected to the power supply. Always switch OFF the appliance, unplug the appliance and wait for the motor to stop, before laying down the appliance or assembling/disassembling or cleaning the appliance.

- **Always IMMEDIATELY unplug the appliance after each operation.**

- Always handle the whole appliance with care and without violence to avoid injuries to persons and damage.

- Always immerse the processing tools in the food, before switching on the appliance, to avoid excessive splashing. Always keep at least 5 cm (ca. 3 finger's breadth) of free space between the food and the bottom of the motor housing.

Features of Your Hand Mixer

Processing Tools and Eject Button

The appliance is delivered with two matching pairs of processing tools:

- Whisks for liquids (i.e. drinks, sauces, frothy desserts, whipped cream).
- Dough hooks for light, runny pastry, potatoes or butter.

When assembled correctly, the processing tools audible engage in the motor housing and will not fall or wobble.

To remove the processing tools, simply press the eject button. For safety reasons, the eject button will work only with the speed control in the OFF-position ('0').

WARNING: Always switch OFF the appliance (speed control position '0') and wait until the motor stops completely before pressing the eject button. Each processing tool is assigned only for one of the two tool holes in the bottom of the motor housing.

CAUTION: The processing tools with washer on the shaft can only be inserted in the wide tool hole. Always insert the processing tools without washer only in the narrow tool hole. Do not insert the processing tools in the wrong tool hole.

Only use matching pairs of processing tools. Do not combine dough hooks and whisks.

Variable Speed Control

The Hand Mixer features a variable speed control with 5 speed settings:

| Speed Setting | Processing Tools | Use for ... |
|---------------|------------------|--------------------------|
| 0 | (OFF) | – |
| 1 | Dough hooks | Butter, potatoes |
| 2 | Whisks | Sauces, drinks |
| 3 | Dough hooks | Runny, light pastry |
| 4 | Whisks | Frothy desserts |
| 5 | Whisks | Whipped cream, egg white |

If attempting to use high speed settings, increase the speed step by step to avoid excessive splashing.

In addition, the Hand Mixer features a boost button for a short high-speed operation.

CAUTION: Do not use the boost button for more than 3 minutes, to avoid overheating.

Operation

Before First Use

Remove all promotional materials and packing as well as any foreign objects, but do not remove the model label.

Before first use and after a long period of storage, clean the processing tools in warm soapy water (see Care and Cleaning).

Using the Hand Mixer

WARNING: Always switch OFF the appliance, wait until the motor stops completely and unplug the appliance before lifting the processing tools out of the food, assembling/disassembling the processing tools or laying down the appliance. Each processing tool is assigned only to one of the two tool holes in the bottom of the motor housing. Insert the processing tool with washer on the shaft in the wide tool hole. **Only insert the processing tool without washer into the narrow tool hole.** Only use matching pairs of processing tools to avoid damage of the appliance.

Before connecting the appliance to the mains power supply, always ensure that the appliance is assembled correctly, according to the following instructions. Do not touch the processing tools with your hands or any objects (i.e. hair, clothes, cooking utensils), when they are mounted and the appliance is connected to the mains power supply. Before switching ON, immerse the processing tools in the food, to avoid excessive splashing and dripping of liquids onto the appliance.

CAUTION: Do not use any fragile vessels with the appliance (i.e. fine dinking glasses or china). It is recommended to use suitable high-sided, medium-sized stainless steel or plastic vessels. During operation, prevent the processing tools from touching the interior walls of the vessel.

1. Prepare your food in a sufficiently large and high-sided vessel.
2. Ensure, that the appliance is switched OFF (speed control position '0') and unplugged.
3. Select the suitable pair of processing tools: dough hooks or whisks (see Processing Tools and Eject Button).
4. Insert the shafts of the processing tools in the tool holes in the bottom of the motor housing, twisting slightly until they engage.

Each processing tool is assigned only to one of the two tool holes in the bottom of the motor housing. The processing tools with washer on the shaft can only be inserted in the wide tool hole. The shafts must be locked on firmly to the motor housing and may not fall or wobble.

5. Connect the power plug to a suitable power wall socket (see Important Safeguards for Electrical Appliances).

WARNING: Do not immerse the processing tools too deep to avoid food splashing on the appliance or dripping in the motor housing or find its way into the tool holes. Always keep at least 5 cm (ca. 3 finger's breadth) of free space between the food and the bottom of the motor housing. Do not touch the processing tools with your hands or any objects (i.e. hair, tissues, cooking utensils) when the appliance is connected to the power supply.

6. Immerse the processing tools in the food.

It is to be expected, that the food will splash during operation. Prevent the processing tools from touching the interior walls of the vessel. Always immerse the processing tools in the food before starting the motor.

WARNING: When processing hot meals, do not hold the appliance in the rising steam to avoid condensation on the motor housing. Immediately wipe off condensate on the motor housing.

7. Hold on to the vessel and switch ON the motor. Slowly move the mixer up and down during operation.

CAUTION: Do not block the ventilation slits on the front and back of the appliance and do not use the appliance in continuous operation for more than 6 minutes to avoid overheating. If processing large quantities of food, regularly interrupt operation and unplug the appliance for at least 10 minutes, to let the motor cool down.

Prefer working with low speed settings. If required, switch to higher speed settings step by step to avoid excessive splashing.

8. Blend your food to the desired quality but at least after 6 minutes of continuous operation switch OFF the motor (speed control position '0') and wait until the motor stops. Then lift the processing tools out of the food.

9. Always unplug the appliance immediately after operation. Lay down the appliance on a stable dry and clean surface, where it can not fall.

If required, place the appliance in an upright position on its back cover. In this case, ensure not to knock over the appliance unintentionally.

WARNING: Always switch OFF the motor, wait until the motor stops completely and unplug the appliance before assembling or disassembling the processing tools.

10. Clean the appliance after use in accordance to the instructions in chapter Care and Cleaning. Do not leave any food dry on the surfaces of the appliance.

Care and Cleaning

WARNING: To avoid injuries to persons and damage, always switch OFF the appliance, wait for the motor to stop completely and unplug the appliance immediately after operation and before laying it down, disassembling or cleaning the appliance. With the appliance connected to the power supply, do not touch the assembled tools with your hands or any objects.

DO NOT place the appliance or power cord in an automatic dishwasher. Do not immerse the motor housing or power cord in any liquids or spill any liquids on it. Always wipe off spilled liquids immediately.

CAUTION: Do not use abrasive cleaners, cleaning pads, corrosive chemicals (disinfectants, bleach) or any sharp or hard objects (i.e. metal scouring pads) for cleaning, for this could damage the surfaces. Carefully clean the appliance with a damp sponge or cloth and warm soapy water.

1. Switch OFF (speed control position '0'), wait for the motor to stop completely and unplug the appliance from the power outlet.

CAUTION: Always handle with care and without violence. To disassemble the processing tools, always press the eject button. Do not pull out the processing tools violently.

2. Hold the processing tools over a bowl or sink and press the eject button to remove the processing tools.

3. Clean the processing tools with a soft nylon washing brush and warm dish-water. Rinse the processing tools thoroughly under running water.

For your convenience, you may clean the processing tools in an automatic dishwasher (in the cutlery tray).

Soak stubborn residues on the processing tools in warm dish-water for ca. 10 minutes and then remove the residues with a soft sponge.

WARNING: Do not place the motor housing or power cord in an automatic dishwasher. Do not use any hard or sharp utensils for cleaning. Do not immerse the motor housing or power cord in water or any other liquid. Do not pour or drip any liquids on the motor housing or power cord. Do not place the appliance on wet or damp surfaces. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire. Always handle with care and without violence.

4. Wipe the motor housing and power cord with a damp soft cloth. Take care not to spill or drip water or any other liquids on the motor housing.

5. Thoroughly dry the motor housing and all parts of the appliance after each cleaning. Leave all parts dry naturally where they are out of reach of young children.

Storage

Always clean the appliance before storing (see Care and Cleaning).

Ensure to store the appliance where it is clean, dry and safe from frost, direct sunlight and inadmissible strain (mechanical or electric shock, heat, moisture) and where it is out of reach of young children. Place the appliance on a clean and stable surface, where it can not fall. Do not place any hard or heavy objects on the appliance.

Notes for disposal

Dispose of the appliance must be effected in accordance with the corresponding local regulations and requirements for electrical appliances. Please contact your local disposal company.

GASTROBACK GmbH
Gewerbestraße 29
D-21279 Hollenstedt/Germany

<http://www.gastroback.de>
E-Mail: info@gastroback.de